#### SPECIFICATION SHEET

### JFW MODEL 50BA-043-63

### BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

100 MHz-18 GHz Frequency Range

Configuration Two solid-state programmable attenuators

Enclosure Type Mini-benchtop

Impedance 50 Ohms nominal

0-63 dB in 0.5 dB steps Attenuation Range

Startup/Default States Maximum attenuation (see ATTEN STARTUP command)

DHCP enabled (see NET command) (configurable)

4 Ethernet users (see NET USERS command)

Prompts off (see PROMPT command) Jog speed 5 (see JOG SPEED command)

VSWR 2.2:1 maximum

< 1.4:1 typical 0.1-6 GHz < 1.8:1 typical 6-18 GHz

Attenuation Accuracy  $\pm$  0.3 dB 0.5 - 3.5 dB± 0.6 dB 4-14.5 dB

 $\pm$  0.8 dB 15-31.5 dB ± 1.00 dB or 2% 32-63 dB

(whichever is greater)

Insertion Loss 8.0 dB maximum

> 2.0 dB typical @ 100 MHz 4.0 dB typical @ 6 GHz 5.5 dB typical @ 12.4 GHz

7.5 dB typical @ 18 GHz

RF Input Power

+24 dBm (operating - Input Side) +15 dBm (operating - Output Side) +25 dBm (no damage - Input Side) +16 dBm (no damage - Output Side)

Switching Speed 1 microsecond typical

(after command is received and processed) (3 milliseconds typical processing time)

DC Supply +12 Vdc

(100-240 VAC AC/DC transformer included)

Manual Control Momentary Lever Actuator Switch with

7-Segment LED Displays (tap to step, hold to jog) (jog speed range is 0-10)

(jog speed set to 0 will disable all levers)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

# --CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

### SPECIFICATION SHEET

## JFW MODEL 50BA-043-63

### BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt, Jog Speed

RF Connector

SMA female

Operating Temperature Range

0°C to +50°C

Outline Drawing Number

092-9420 (50BA-043-63 SMA)

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
	10/03/2019		TRS 10/03/2019		
30836	12/21/2020	A	TRS 12/21/2020		

Page 2 of 2 JFW FORM E-7-F REV F