

SPECIFICATION SHEET

JFW MODEL 50PA-846

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	200-6000 MHz
Configuration	24 individually controlled solid-state programmable attenuators
Enclosure Type	19 inch rack mount (4RU high for SMA female) (5RU high for N female)
Impedance	50 Ohms nominal
Attenuation Range	0-63 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	1.8:1 maximum 200-800 MHz 1.6:1 maximum 800-6000 MHz
Attenuation Accuracy (guaranteed monotonic)	± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-63 dB (whichever is greater)
Insertion Loss	6.6 dB maximum 2.7 dB typical @ 200 MHz 3.0 dB typical @ 700 MHz 3.7 dB typical @ 2000 MHz 6.3 dB typical @ 6000 MHz
RF Input Power*	+27 dBm average +33 dBm (no damage)
Switching Speed	3 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50PA-846

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

AC Supply

100-240 VAC @ 47-63 Hz
2 Amp 5x20mm "Slo-Blo" AC fuse
Littelfuse#215-002, JFW#025-021

RF Connector

N or SMA female


Operating Temperature Range

0°C to +50°C

Outline Drawing Numbers

092-7621 (50PA-846 N)
092-7899 (50PA-846 SMA)

* Units shipped before 11/20/2018 (date code 1847) are only rated at +20dBm maximum. The JFW date code is a four digit code (YYWW) that follows the six digit serial number. For example date code 1908 is the 8th week of 2019.

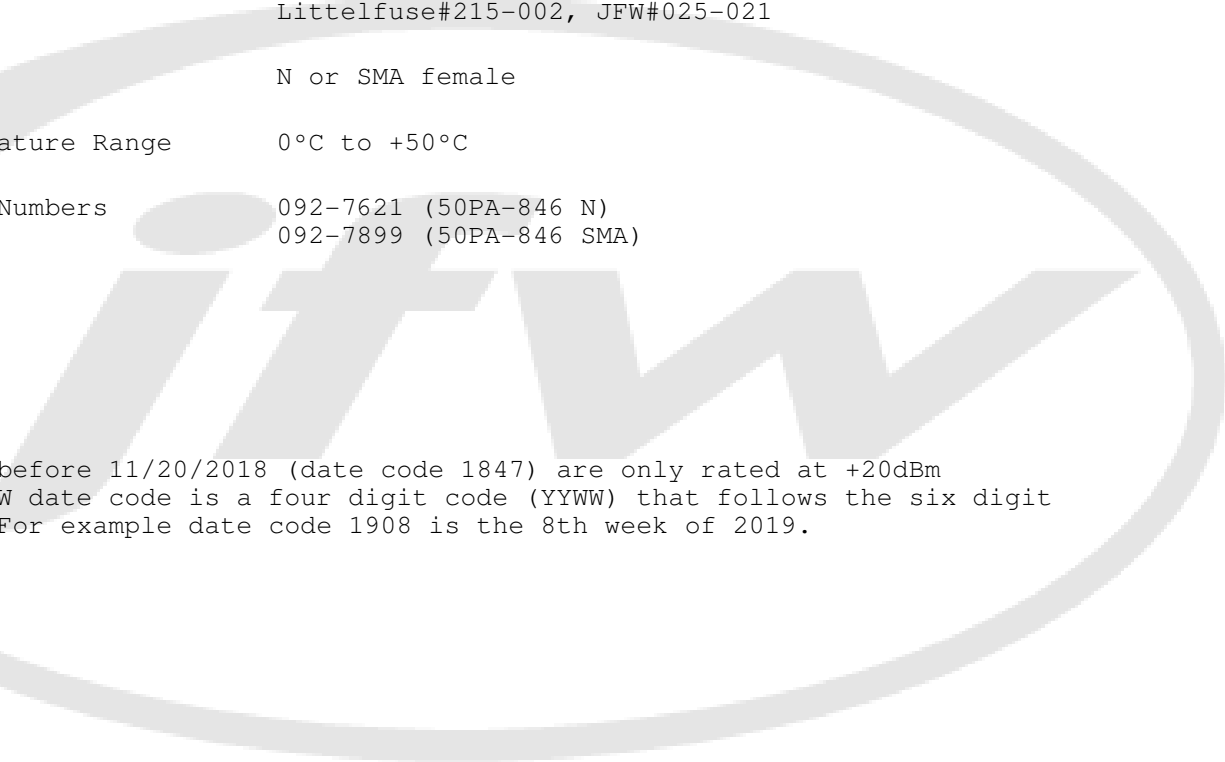

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	12/13/2013		TRS 12/13/2013	29172	11/20/2018	C	CLK 11/20/2018
24239	06/27/2014	A	TRS 06/27/2014	29857	10/02/2019	D	TRS 10/02/2019
25773	09/24/2015	B	TRS 09/24/2015				