

SPECIFICATION SHEET
JFW MODEL 50PA-951
PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	500-6000 MHz
Configuration	16 x 3 LC Handover Test System (see block diagram 092-8351 for attenuator addressing) (all ports are bi-directional) (limited fan-out configuration) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 4RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	1.7:1 maximum < 1.5:1 typical (ANT ports) < 1.6:1 typical (J ports)
Insertion Loss	ANT1-16 to J1,3 31.2 dB maximum 29.9 dB typical ANT1-16 to J2 35.5 dB maximum 33.9 dB typical
Power Divider Isolation	20 dB minimum
Attenuation Accuracy	± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)
RF Input Power	+27 dBm average
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50PA-951

PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Manual Control 20-Button Keypad and LCD display
(IP Address configurable via keypad)
(Net mask configurable via keypad)
(Gateway configurable via keypad)
(Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)
RS-232 (up to 115200 Baud)

Remote Commands Attenuator Control Commands:
Atten, Set Attenuator, Read Attenuator, Set All
Attenuators, Read All Attenuators, Read All Extended,
Fade Attenuator, Variable Attenuator Handover, Block,
Set Block, Read Block, Read All Blocks, Fade Block,
Variable Block Handover

System Commands:
Help, Identification, Store, Recall, Pause, Net,
Serial, Close, Disconnect, MOTD, Date, Message,
Restrict, IDENT, Name, Show Users, Reboot, Uptime,
Prompt

RF Connector N or SMA female

AC Supply 100-240 VAC @ 47-63 Hz
2 Amp 5x20mm "Slo-Blo" AC fuse
Littelfuse #215-002, JFW #025-021

Temperature Range 0°C to +50°C

Physical Size See outline drawing 092-8350

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	07/10/2015		TRS 07/10/2015				
28159	10/06/2017	A	CLK 10/06/2017				