

SPECIFICATION SHEET
JFW MODEL 50PA-983
HANDOVER TEST SYSTEM

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	500-6000 MHz
Configuration	8 x 8 Handover System (see block diagram 092-6869 for attenuator addressing) (all ports are bi-directional) (full fan-out configuration) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 12RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	1.7:1 maximum < 1.5:1 typical
Insertion Loss	41 dB maximum 31 dB typical @ 500 MHz 40 dB typical @ 6000 MHz
Attenuation Accuracy	± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)
Isolation	50 dB minimum (Input to Input) 50 dB minimum (Output to Output)
RF Input Power	+30 dBm average
Switching Speed	4 microseconds typical (after command received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET
JFW MODEL 50PA-983
HANDOVER TEST SYSTEM

JFW Industries, Inc.
 Phone: 317-887-1340
 sales@jfwindustries.com
 www.jfwindustries.com

Remote Commands

Attenuator Control Commands:
 Atten, Set Path, Read Path, Read All Paths, Set
 Attenuator, Read Attenuator, Set All Attenuators, Read
 All Attenuators, Read All Extended, Fade Attenuator,
 Variable Attenuator Handover

MIMO Testing Commands:
 Block, Set Block, Read Block, Read All Blocks, Fade
 Block, Variable Block Handover

System Commands:
 Help, Identification, Store, Recall, Pause, Net,
 Serial, Close, Disconnect, MOTD, Date, Message,
 Restrict, IDENT, Name, Show Users, Reboot, Uptime,
 Prompt

RF Connector

N or SMA female

AC Supply


100-240 VAC @ 47-63 Hz
 2 Amp 5x20mm "Slo-Blo" AC fuse
 Littelfuse #215-002, JFW #025-021

Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-8481 (N)
 092-8481-01 (SMA)

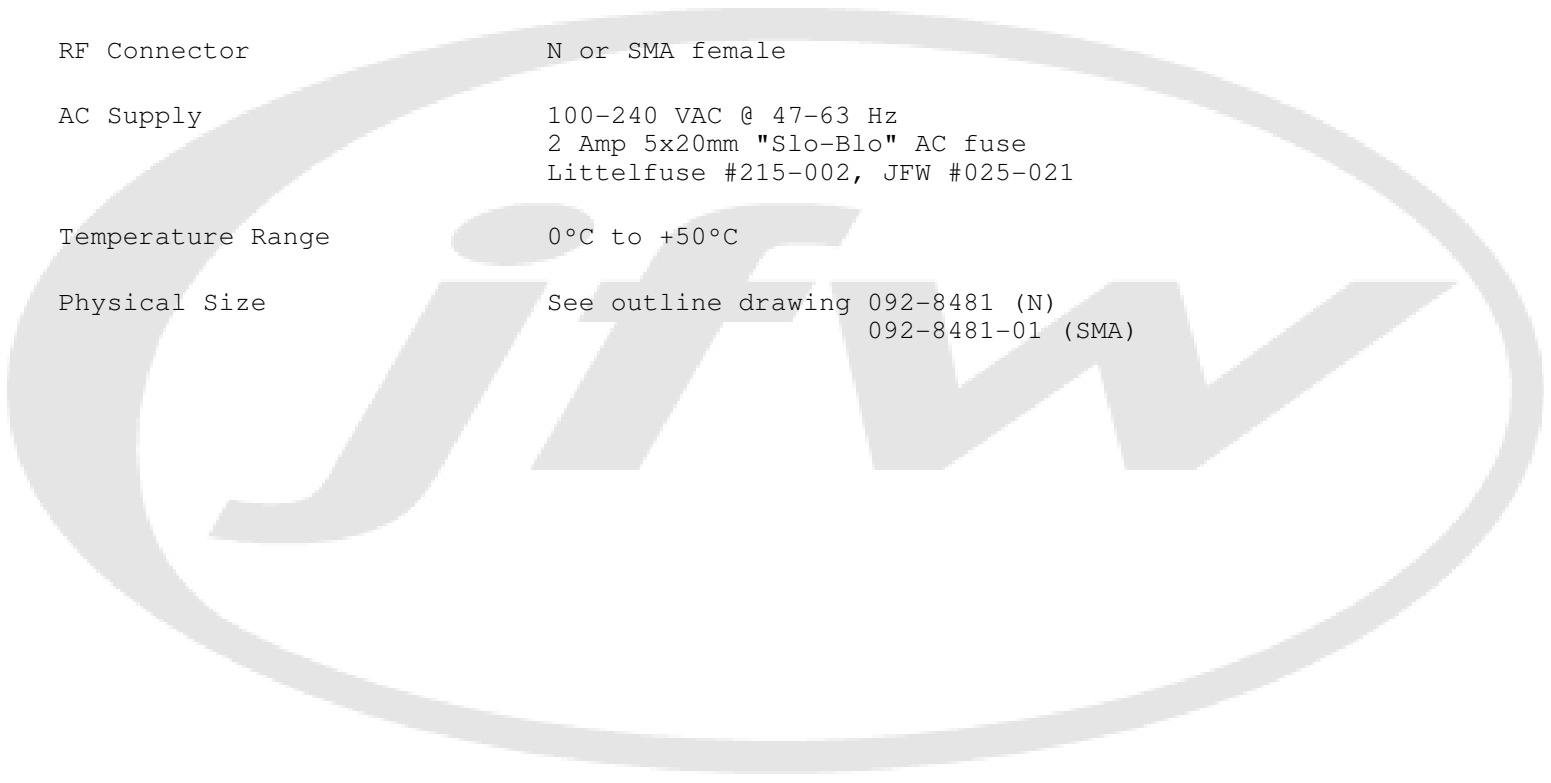

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	11/18/2015		CLK 11/18/2015	28159	10/05/2017	C	CLK 10/05/2017
26507	04/04/2016	A	TRS 04/04/2016	30810	12/08/2020	D	CLK 12/08/2020
27941	07/13/2017	B	TRS 07/13/2017				