SPECIFICATION SHEET

JFW MODEL 50BA-032-31

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range	0.1-18 GHz				
Configuration	Four individually controlled solid-state programmable attenuators				
Enclosure Type	Mini-benchtop				
Impedance	50 Ohms nominal				
Attenuation Range	0-31 dB in 1 dB steps				
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command) Jog speed 5 (see JOG SPEED command)				
VSWR	2.2:1 maximum < 1.7:1 typical				
Attenuation Accuracy (guaranteed monotonic)	± 0.50 dB 1-8 dB ± 1.00 dB 9-16 dB ± 1.25 dB 17-31 dB				
Insertion Loss	 7.5 dB maximum 2.0 dB typical @ 0.1 GHz 3.2 dB typical @ 3 GHz 4.0 dB typical @ 6 GHz 5.5 dB typical @ 12.4 GHz 6.6 dB typical @ 18 GHz 				
RF Input Power	+20 dBm average +25 dBm (no damage)				
	Warning: DC coupled, DC voltage must not exceed 0 Volts on RF connectors				
Switching Speed	1 microsecond typical (after command is received and processed) (3 milliseconds typical processing time)				
DC Supply	+12 Vdc (100-240 VAC AC/DC transformer included)				

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50BA-032-31

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Manual Control	Momentary Lever Actuator Switch with 7-Segment LED Displays (tap to step, hold to jog) (jog speed range is 0-10) (jog speed set to 0 will disable all levers)				
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)				
Remote Commands	Attenuator Control Commands: Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover				
	Switch Control Commands: Switch, Set Switch, Read Switch				
	System Commands: Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt, Jog Speed				
RF Connector	SMA female				
Operating Temperature Range	0°C to +50°C				
Physical Size	See outline drawing 092-8150				

ECR/ECN # DATE	REV APP	r / date	ECR/ECN #	DATE	REV	APPR / DATE
09/26/2017	CLK	09/26/2017				
28667 04/19/2018	A CLK	04/19/2018				

