

**SPECIFICATION SHEET**

**JFW MODEL 50PA-504**

**BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	200-6000 MHz
Configuration	Two individually controlled solid-state programmable attenuators
Enclosure Type	Benchtop
Impedance	50 Ohms nominal
Attenuation Range	0-63 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)
VSWR	1.8:1 maximum 200-800 MHz 1.6:1 maximum 800-6000 MHz
Attenuation Accuracy (guaranteed monotonic)	± 0.50 dB 1-3 dB ± 0.75 dB 4-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-63 dB (whichever is greater)
Insertion Loss	6.6 dB maximum 2.7 dB typical @ 200 MHz 3.0 dB typical @ 700 MHz 3.7 dB typical @ 2000 MHz 6.3 dB typical @ 6000 MHz
RF Input Power*	+27 dBm average +33 dBm (no damage)
Switching Speed	3 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

**--CONTINUED--**

**SPECIFICATION SHEET**

**JFW MODEL 50PA-504**

**BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

SMA or N female

Operating Temperature Range

0°C to +50°C


AC Supply

100-240 VAC @ 47-63 Hz

Outline Drawing Numbers

092-5984 (50PA-504 N)  
092-5985 (50PA-504 SMA)

\* Units shipped before 8/9/2018 (date code 1832) are only rated at +20dBm maximum. The JFW date code is a four digit code (YYWW) that follows the six digit serial number. For example date code 1908 is the 8th week of 2019.

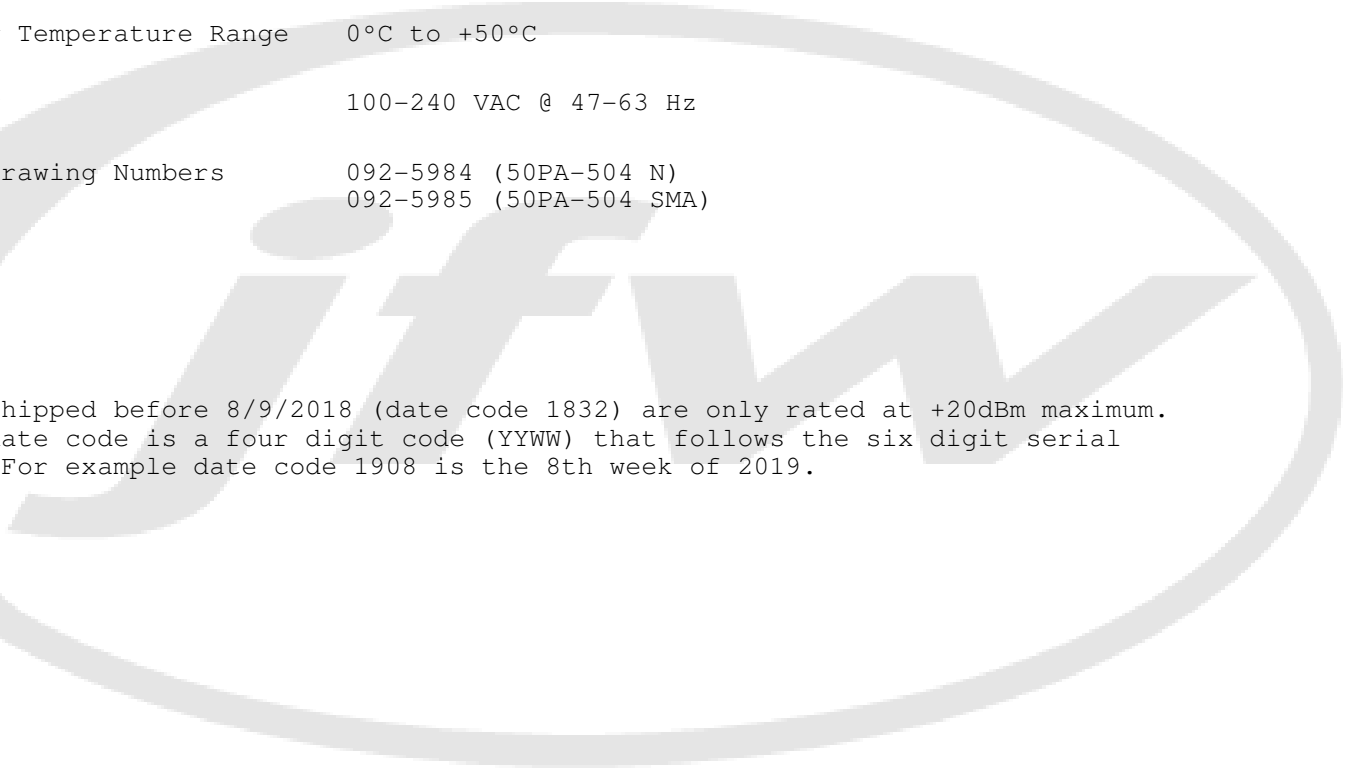

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
17674	09/11/2009	A	CLK 09/11/2009	24239	02/24/2015	D	TRS 02/25/2015
17974	12/16/2009	B	CLK 12/16/2009	28940	08/09/2018	E	TRS 08/09/2018
18146	01/22/2010	C	CLK 01/22/2010	29857	10/02/2019	F	TRS 10/02/2019